



Installation manual



WWW.RACETORX.CO.UK

RTX477 Brake Junction Valve

This product should be installed by a trained vehicle technician

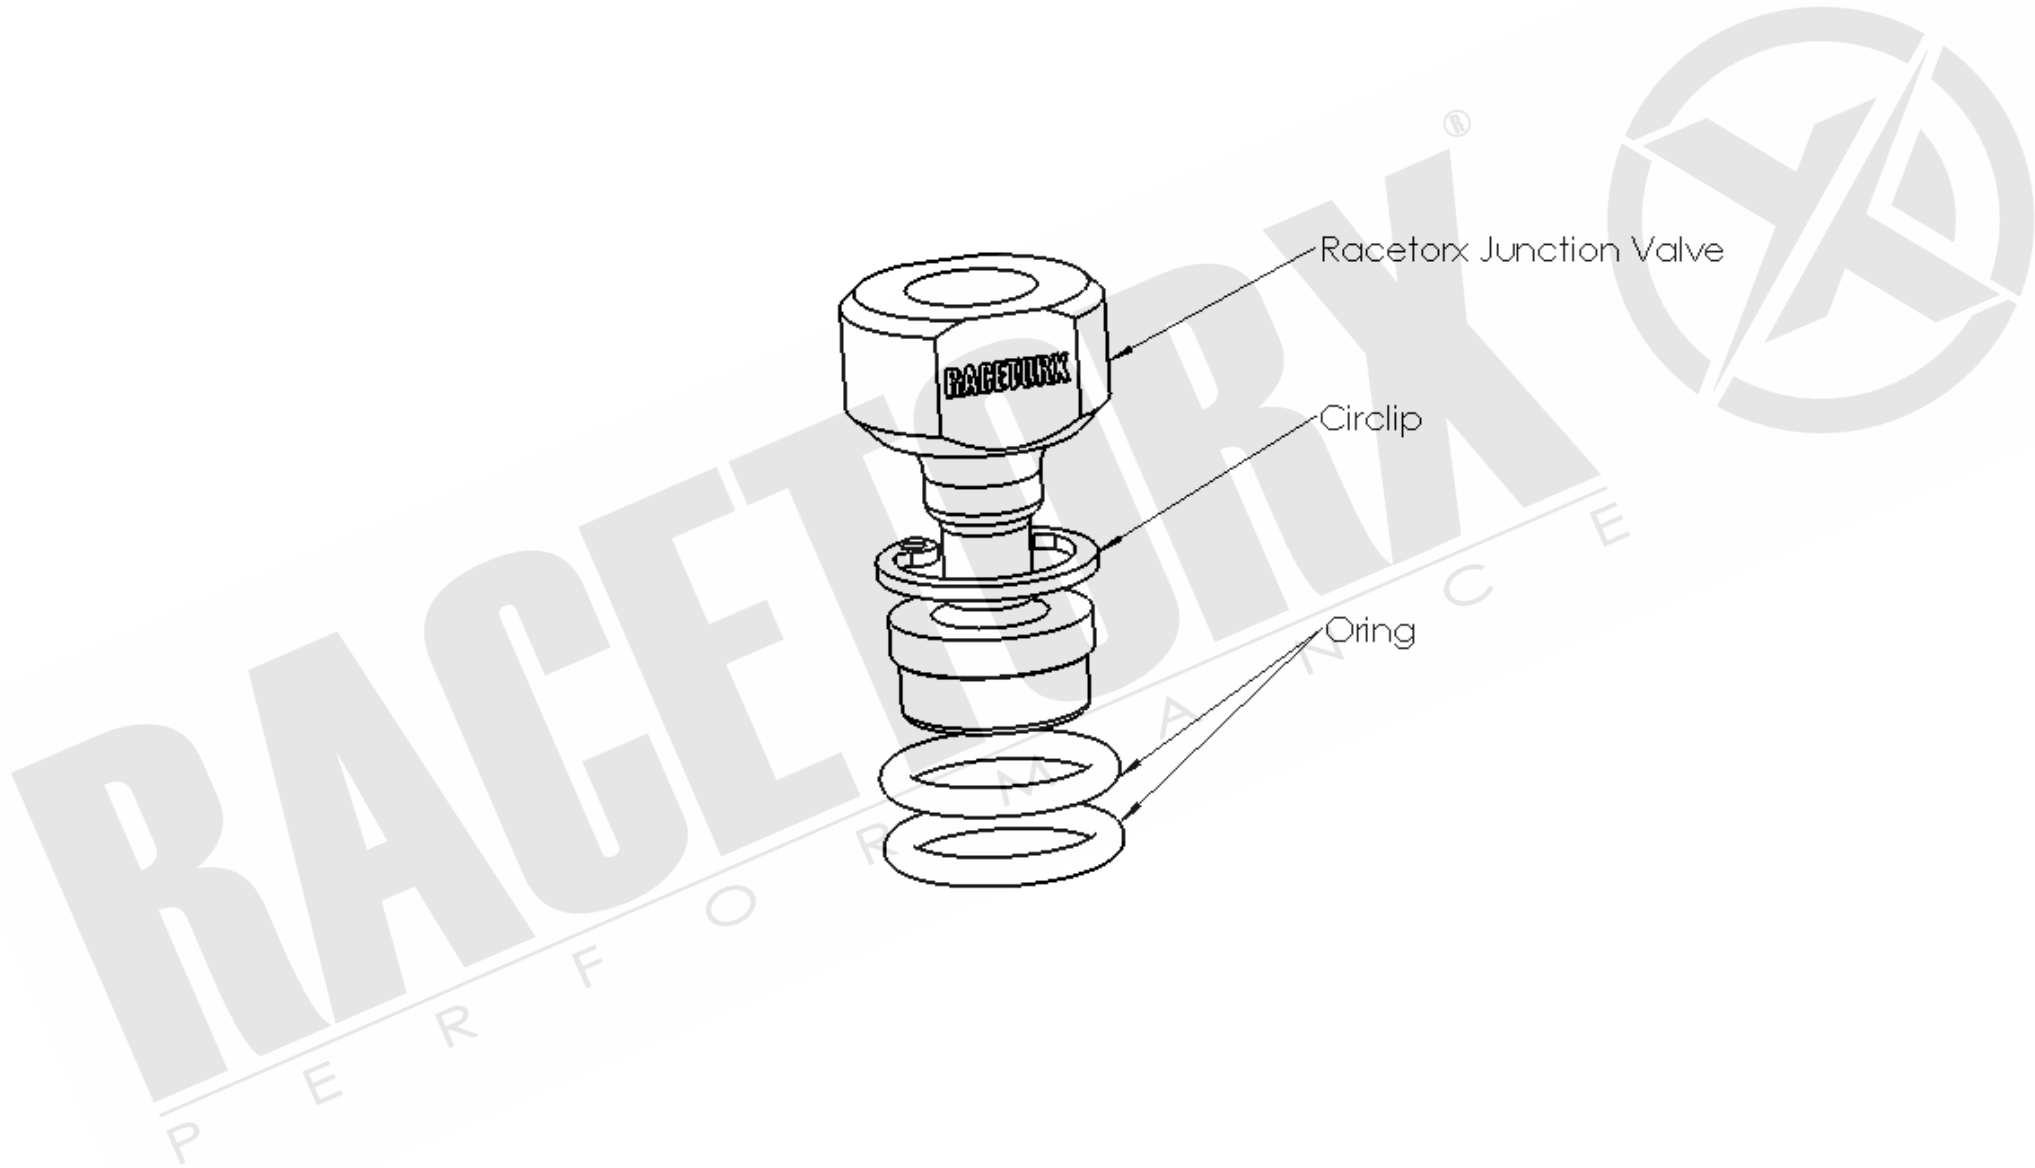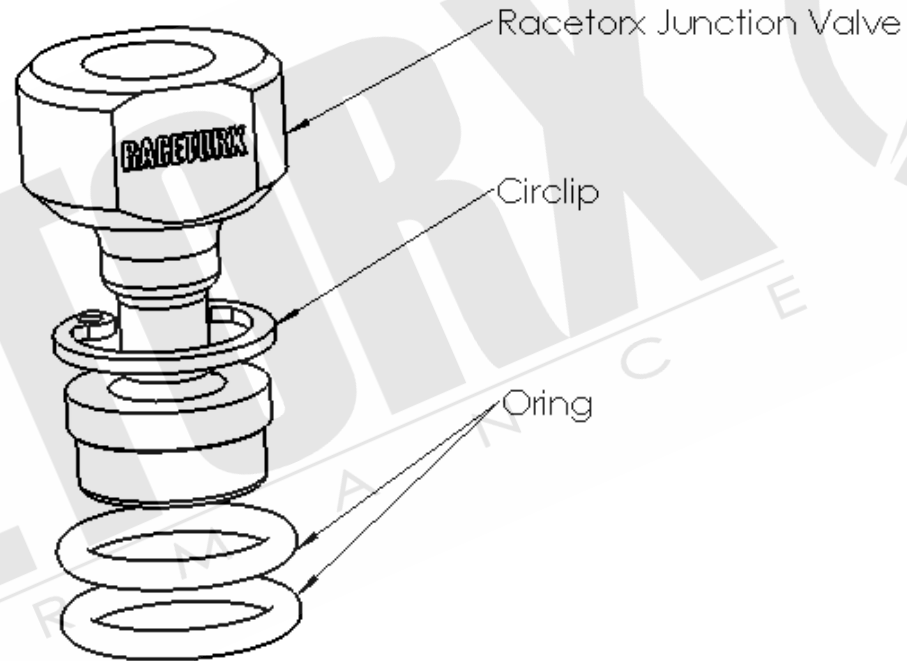






1. With circlip pliers, remove the circlip and pull out the nipple.



2. Remove rubber o-ring.


Installation

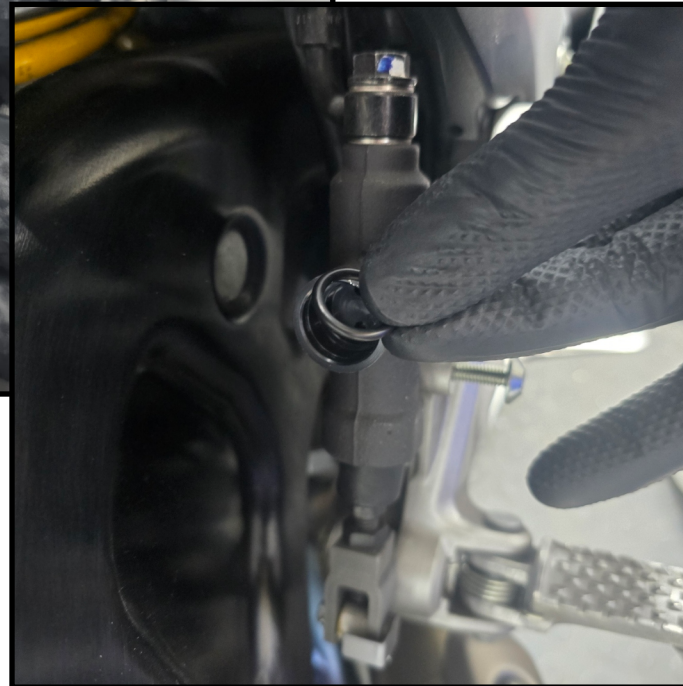

3. Fit circlip over junction valve.
4. Install o-ring into cavity.



5. Press junction valve into master cylinder.

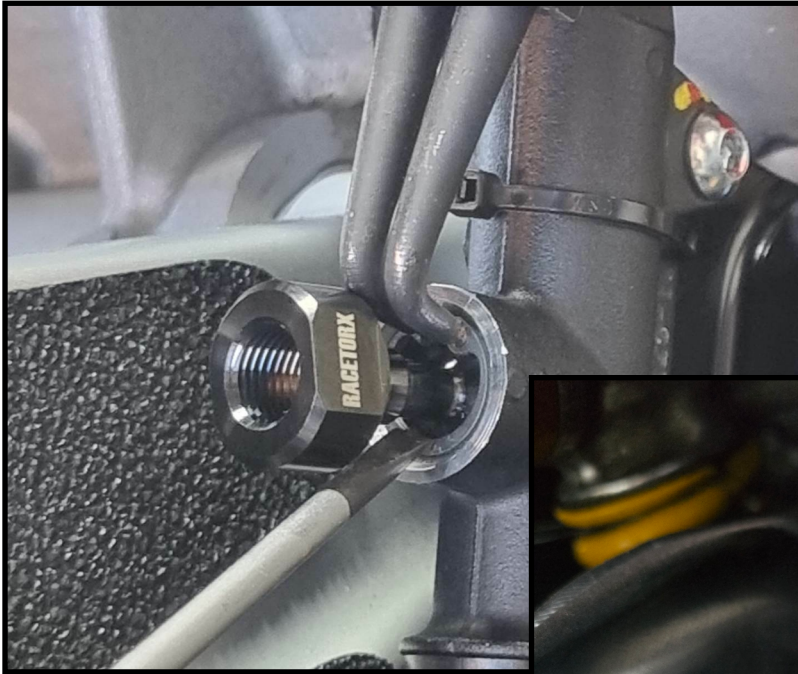

6. Using small circlip pliers install the circlip, it may help to use a small flat head screwdriver on the opposite side to install level. Inspect the fit to ensure that the circlip is seated in the circlip groove.



7. Now you can fit the banjo bolt, banjo tail and copper washers. You now have a dual port setup, enjoy!



After installation of the Junction valve:

1. Check any residue of brake fluid is cleaned up and be sure no brake fluid is on the tyres.
2. Make sure the circlip is fitted in the circlip groove