



Installation manual



WWW.RACETORX.CO.UK


RTX479 Brake Junction Valve

This product should be installed by a trained vehicle technician

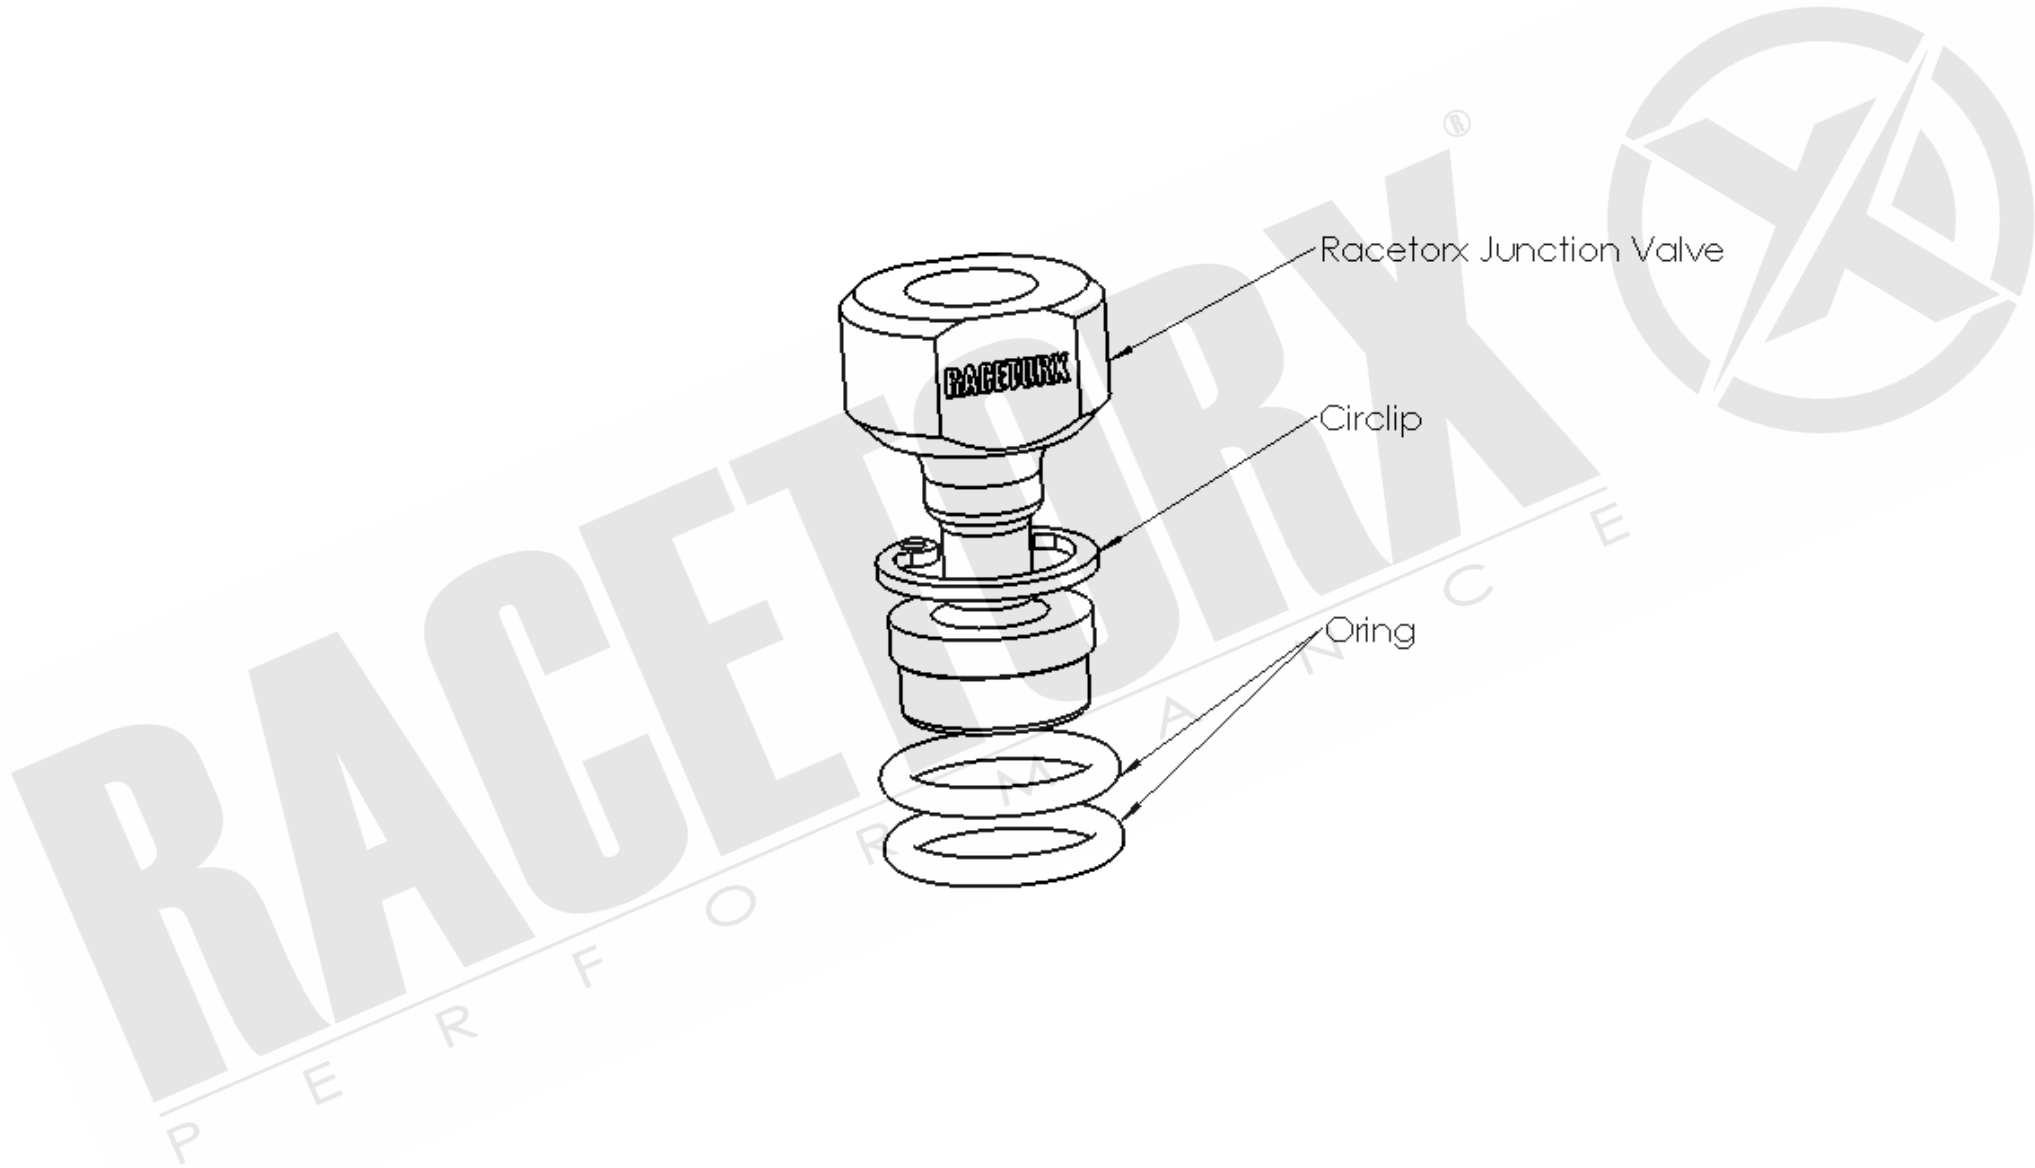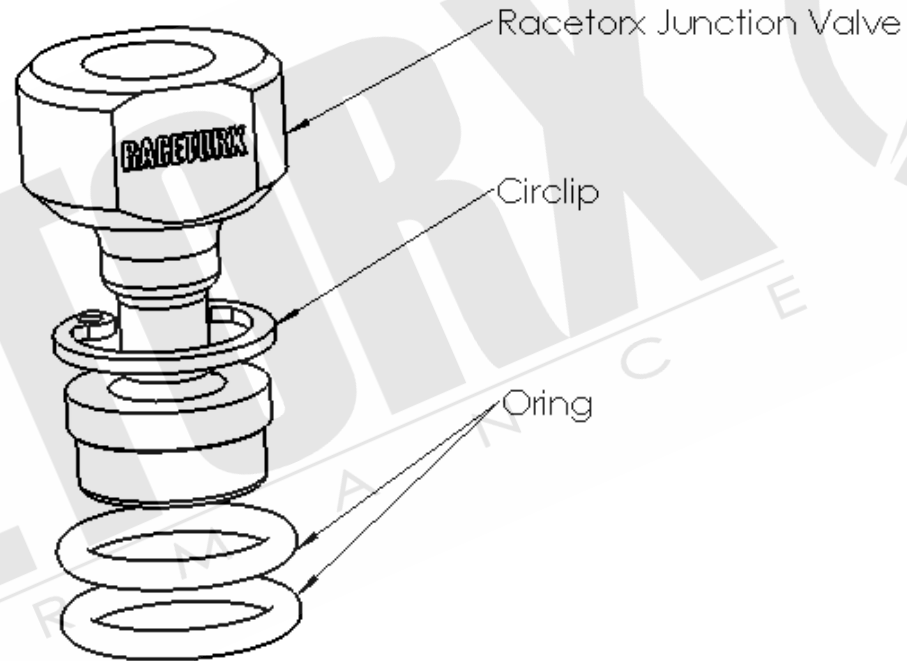




Installation

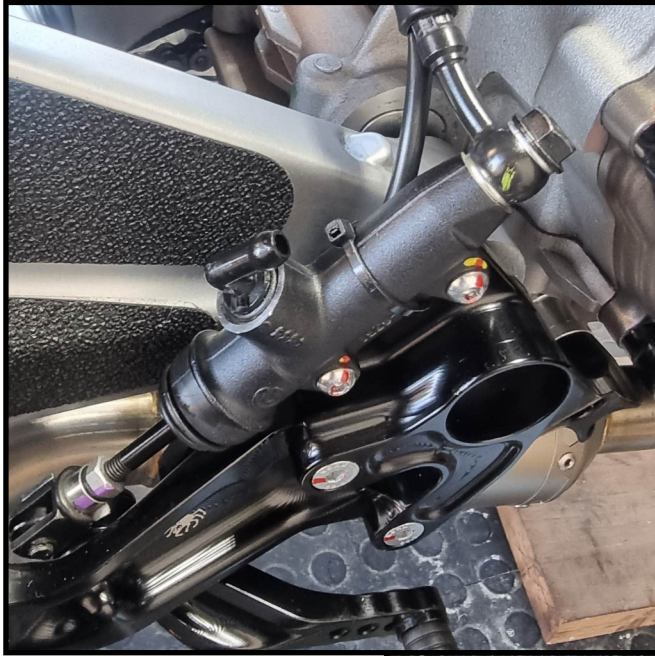


 1. With pliers, pry out the plastic reservoir nipple.




2. Remove rubber donut.

Installation

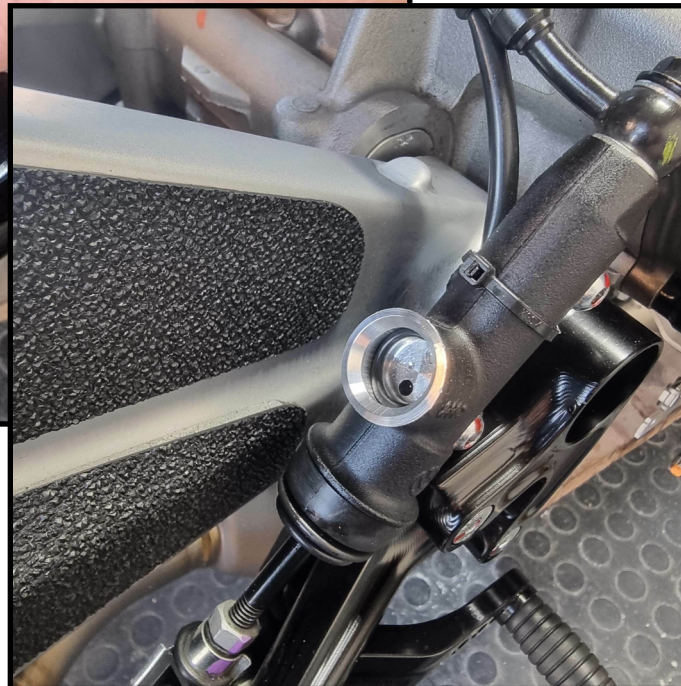


3. Clean the port with tissue/cloth then place both seals into the port one above the other.

Installation

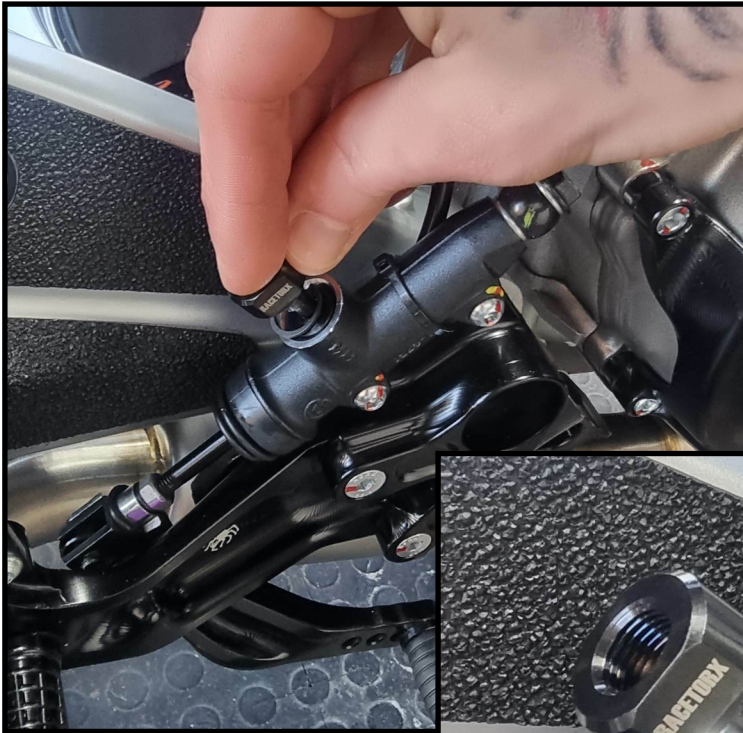

4. Expand circlip over junction valve then place into the master cylinder.

5. Once the junction valve is seated in the master cylinder, turn the junction valve and press down to make sure it's seated correctly.

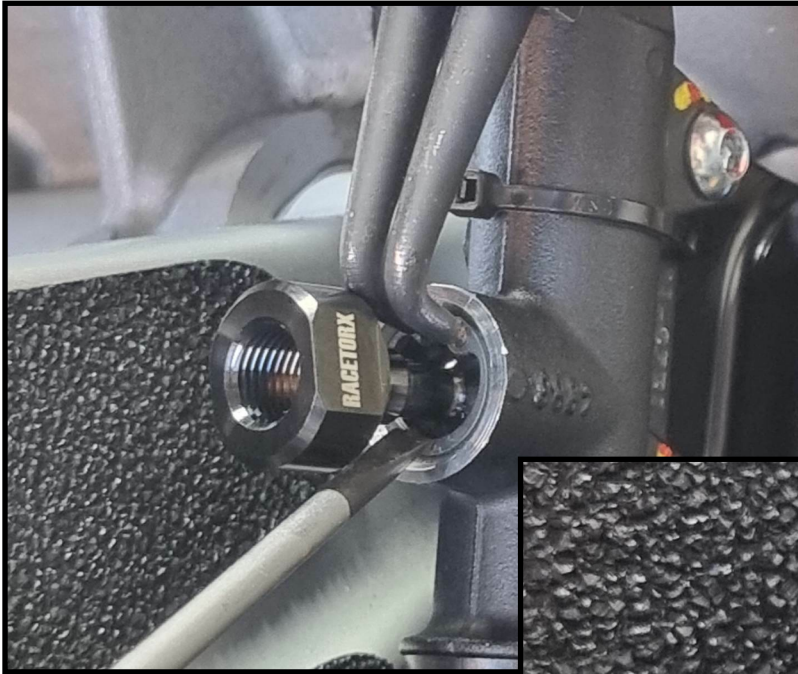

6. Using small circlip pliers install the circlip, it may help to use a small flat head screw driver on the opposite side to install level. Inspect the fit to ensure that the circlip is seated under the lip properly.





7. Now you can fit the banjo bolt, banjo tail and copper washers. You now have a dual port setup, enjoy!



After installation of the Junction valve:

1. Check any residue of brake fluid is cleaned up and be sure no brake fluid is on the tyres.
2. Make sure the circlip is fitted fully under the lip.