


Installation manual



WWW.RACETORX.CO.UK

RTX450 Brake Junction Valve


This product should be installed by a trained vehicle technician

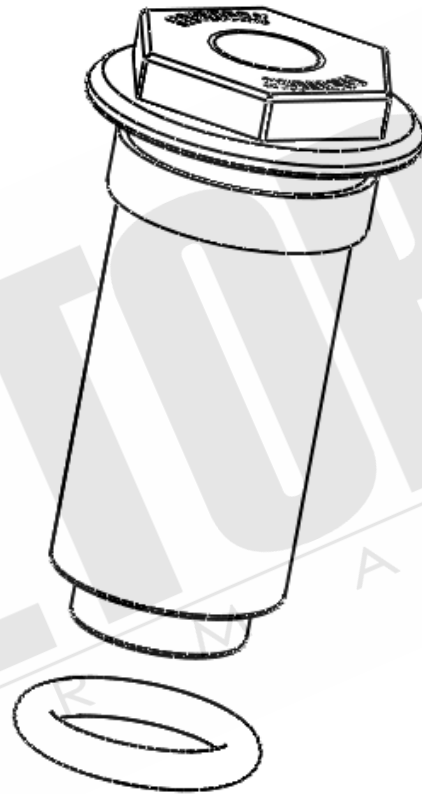

RACETORX
P E R F O R M A N C E






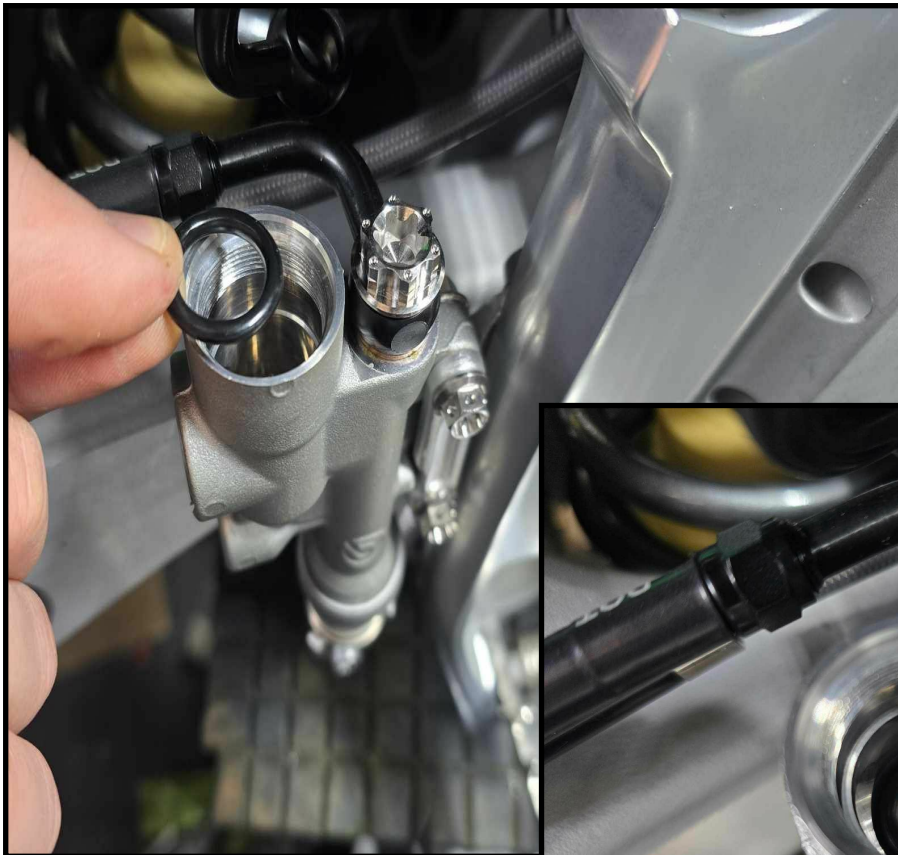

1. Remove original screw cap and O-ring.
2. Remove & clean cavity of brake fluid.
3. Insert supplied O-ring into base of cavity.



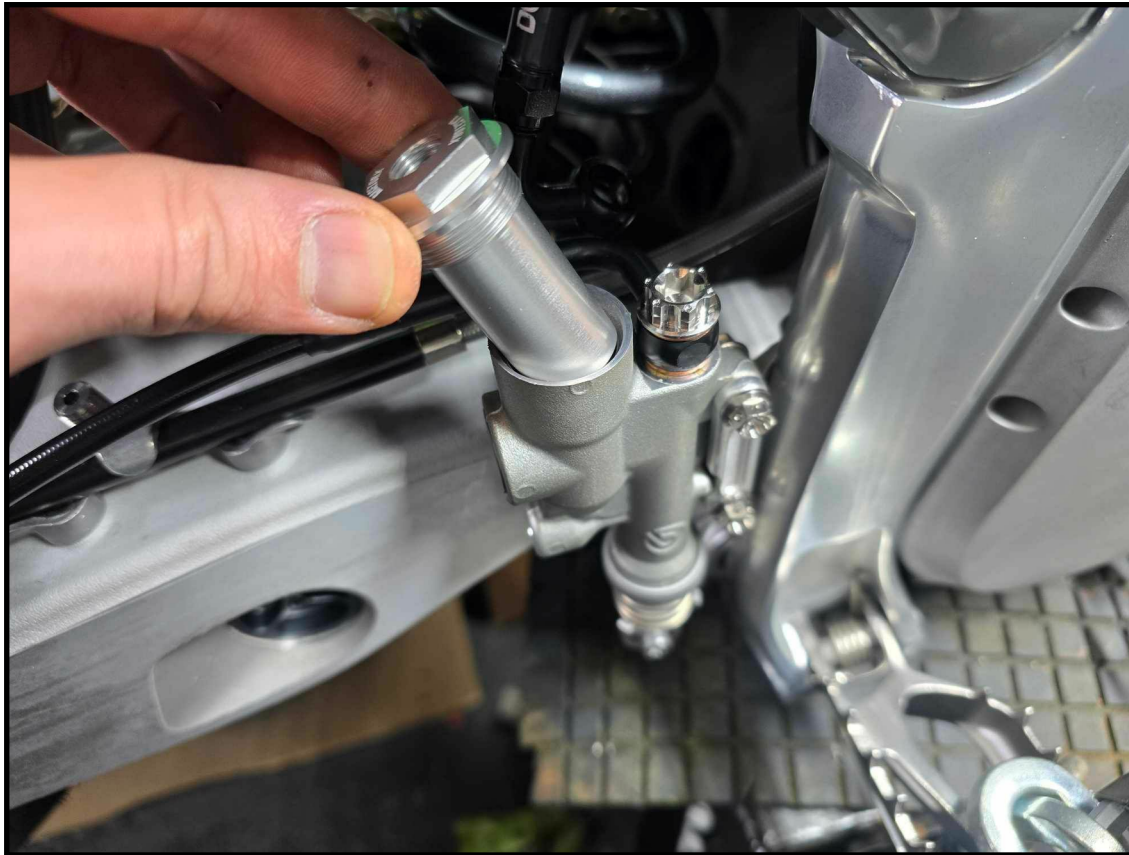

4. Insert the junction valve and screw my hand, you will feel tension as the junction valve compresses around the o-ring, once to the base torque to 20nm

WARNING- Do not add any additional parts from the original master cylinder, do not fit OEM o-ring to top of junction valve.



5. thumb brake or lever brake then mounts into the junction valve as shown which is an M10x1.00 thread.



After installation of the Junction valve:

1. Check any residue of brake fluid is cleaned up and be sure no brake fluid is on the tyres.